





## Wireless receiver for N64

### UPDATE FIRMWARE\_V17.03\_v100144

**STEP1** Open the upgrade program, Press the "Update" button

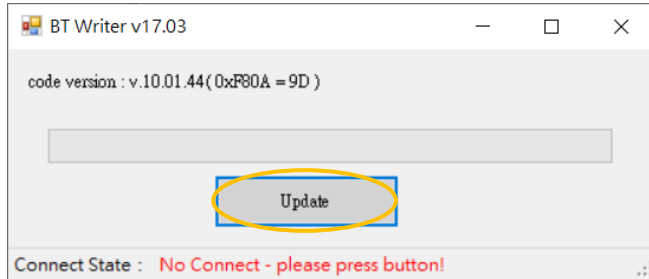






**STEP2** Press and hold the pairing button "SYNC", and then connect Micro USB to PC. You can lose the pairing button "SYNC" when "Connect State: Connected" shows on the screen and the LED is off.

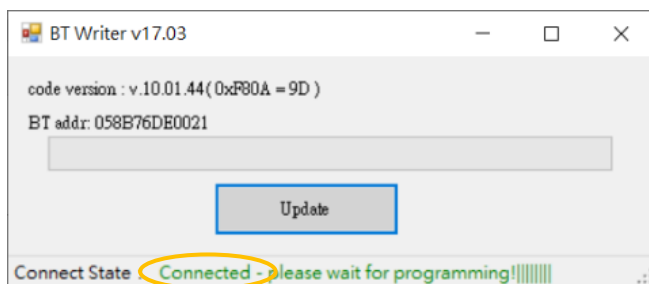

**STEP3** (Please do not remove Micro USB during upgrading.)

When the upgrade progress is up to 100%(also you will see "No Connect" on the screen), your Micro USB can be removed.

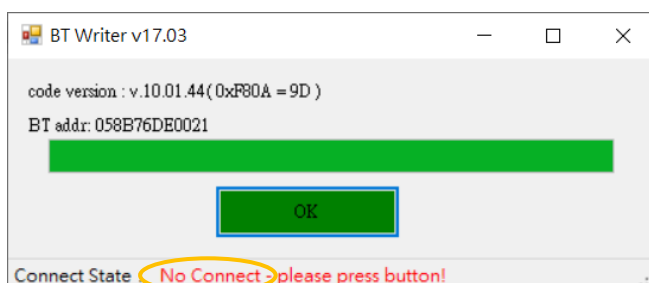

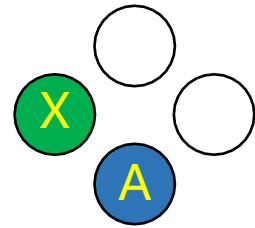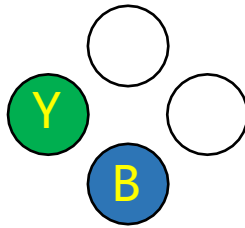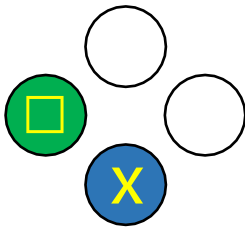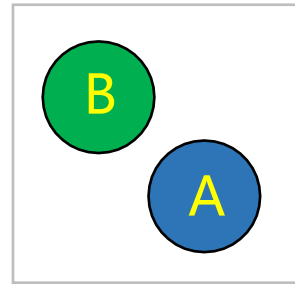

### Button Mapping diagram

Nintedo 64	PS4	Switch Pro	Xbox One
START	PS	⬆️	☰
Z	R2/L2	ZR/ZL	RT/LT
A	✖️	B	A
B	■	Y	X
▲	Right Stick	Right Stick	Right Stick
▼			
◀️			
▶️			
L	L1	L	LB
R	R1	R	RB
D-Pad	D-Pad	D-Pad	D-Pad
Left Stick	Left Stick	Left Stick	Left Stick